



DRIVE SHAFT COVER 8285

FITS: '03-UP VTX1300 AND '02-UP VTX1800

PART #	INCLUDED
608285C	1 Drive Cover W/Adhesive Pads Installed
608285	1 Tube Cover Assembly
908285	1 H/W Kit Including the Following:
	1 M8 Shock Mounting Bolt
	1 Hose Clamp
	2 M8 Flat Washer SST (may only need one)
	2 10-24 X 1/4 BSCS 18-8 SST
308285	1 Installation Instructions

THANK YOU FOR CHOOSING KURYAKYN!

NOTE

You may not need to use both of the M8 washers for spacers.

PROCEDURE


STEP 1 Remove the rear bottom shock bolt. See PIC.1. The shock will not fall off the stand off stud. This bolt will not be reused.

STEP 2 Thread the clamp provided through the tabs shown in PIC.2. Threading the clamps in this way will make it easier to get the screw driver in from the bottom and tighten.

STEP 3 Place this tube cover in place so the clamp is going around the drive shaft housing. Feed the clamp but leave it loose.

STEP 4 Place the Drive Cover in place (over the top of tube) and start and tighten the two 10-24 x 1/4" fasteners. See PIC.3.

-cont.-

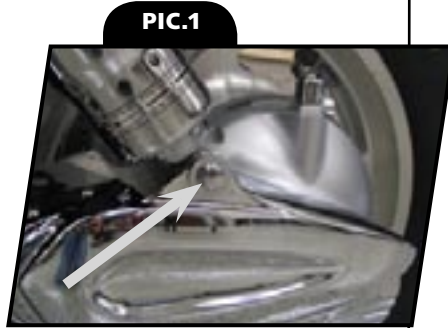

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA™ All Rights reserved.



STEP 5 Install the shock bolt (that is supplied) with one or two washers between the cover and the shock. Do not tighten this bolt at this time. If the cover comes in contact with the final drive housing (See [PIC.4](#)) you will need to shim it out with the second spacer washers provided. See [PIC.5](#).

STEP 6 Snug up the clamp that secures the tube cover.

STEP 7 Tighten up the rear shock bolt. This bolt needs to be tightened to 20 ft lbs of torque.

STEP 8 Recheck to make sure all fasteners and clamps are secure.

Ride On!

Kuryakyn™

PIC.4



PIC.5



PAGE

2