



LIGHTED FENDER SKIRT - REAR 8644

FITS: '99-UP ROAD GLIDE, ROAD KING CUSTOM, SCREAMIN' EAGLE DRESSERS OR ROAD KINGS

PARTS INCLUDED

- 1 Lighted Fender Skirt
1 Alcohol Pad
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Phillips screw driver, warm soapy water and a clean rag.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

STEP 2 Remove the two screws that secure rear taillight lens, (PIC. 1); unplug the light and remove the taillight assembly from the motorcycle.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 3 Thoroughly clean the inside of the bottom of the fender with warm soapy water and a clean rag. Rinse and allow area to dry.

NOTE: You may need to wash the fender several times to ensure that all oil, dirt and debris has been removed.

STEP 4 Once the fender is clean and dry, clean the fender with the alcohol-cleaning pad to ensure that the adhesive will bond properly.

-cont.-



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today--select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 5 Test fit the cover on the fender and check for clearance between the fender skirt and all moving parts as well as the proper orientation of the skirt.

STEP 6 Using the back of your fingernail, rub the adhesive backing to activate the catalyst and then remove the backing.

STEP 7 Place skirt against the inside of the fender and press and hold the skirt for one (1) minute, full bonding strength will occur in 24 hours.

NOTE: We suggest using padded clamps to hold in position for several hours if possible for best adhesive bond.

STEP 8 Once the skirt has been installed, route the power cord inside of the fender and out the taillight housing.



STEP 9 The new Lighted Skirt will plug in above the brake light plug. (PIC. 2) Make sure to pull excess slack in the housing to prevent interference with the rear tire.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 10 Turn key on and check to make sure the skirt works properly.

STEP 11 Reinstall the taillight by plugging in the wiring harness into the base assembly and secure the lens using hardware from STEP 2.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

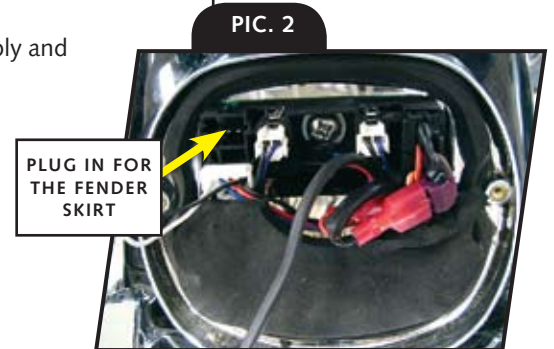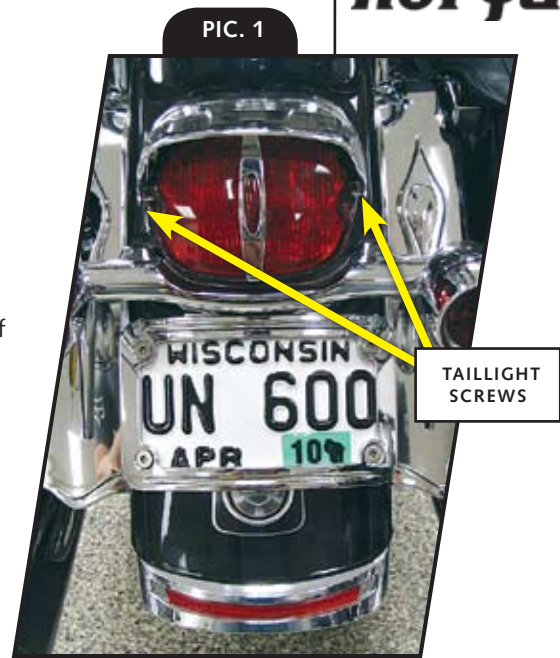

Ride On!